





Foot Ring Assembly Instructions

*** Initial Installation must be completed from the bottom of the cylinder ***

1) Unlock the foot ring by pushing the top of the inner center hub down.

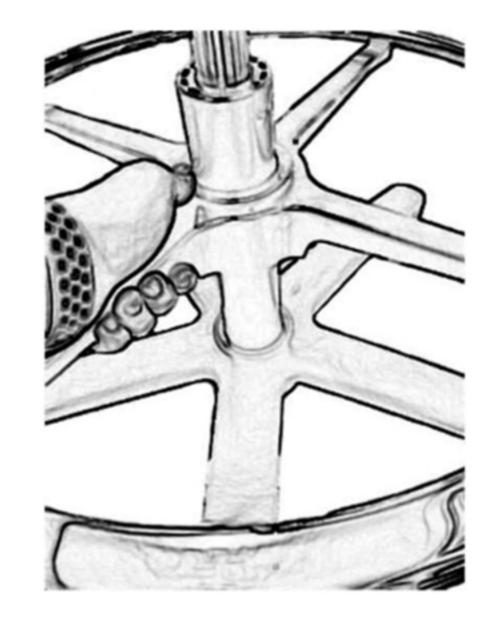

- 2) Adjust the foot ring to your desired height.
- 3) Lock the foot ring in place by pushing on the spokes until the inner center hub extends approximately 1/2" from the outer center hub.

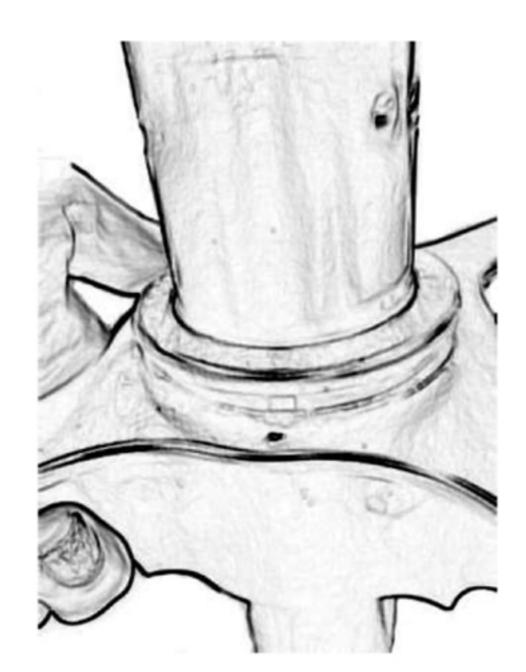

4) To fully lock, put pressure alternatively on the outer ring sides.



*If your foot ring comes with a knob, you'll just need to tighten it.

